

Europe

Italy

CHINT Italia Investment Srl

Add: Via Bruno Maderna 7 30174 Venezia
Tel: +39 041.446614
Fax +39 041.5845900
E-mail: info@chint.it

Spain

CHINT Electrics S.L.

Add: Calle José Echegaray, Num 8.Parque Empresarial Las RozasEdificio 3,
Planta Baja, Ofificina 7-8.C.P: 28232 Las Rozas (Madrid)
Tel: +34 91 645 03 53
E-mail: info@chint.eu

Czech Republic

NOARK Electric Europe s.r.o.

Add: Sezemická 2757/2, 193 00 Prague 9
Tel: +420 226 203 120
Email: europe@noark-electric.com

Turkey

CHINT Turca Elektrik Sanayi VE Ticaret Anonim Sirketi

Add: Zumrutevler Mahallesi Ural Sokak No. 22/18 NAS PLAZA B Block KAT 1,
Maltepe, Istanbul
Tel: +90216 621 00 55
Fax: +90216 621 00 50
E-mail: fatura@chint.com.tr

West Asia & Africa

Egypt

CHINT Electrics (Egypt) Co., Ltd

Add: Building B16 - Smart village, Abu Rawash - Giza, Egypt
Tel: +20 1097173769
P.O BOX : 00202
Email: chinteg@chintglobal.com

Kenya

ZHENGTAI ELECTRICS(KENYA) CO., LIMITED

Add: OFFICE 1A, 8TH FLOOR, KISM TOWERS, LR No. 209/945/1- NGONG
ROAD - NAIROBI, KENYA
Tel: +254113958911
Email: zhangyuans@chint.com

U.A.E

CHINT MIDDLE EAST AND AFRICA DMCC

Add: Unit No: 2101, 21085,2109 , Jumeirah business center 1, Cluster G,
Jumeirah Lakes Towers, Dubai, UAE
Tel: +97145571532
P.O BOX: 337555
E-mail: global-sales@chint.com

Nigeria

CHINT POWER & ENERGY SERVICES CO., LIMITED

Add: 3RD FLOOR TOWER 2, CHURGATE BUILDING , VICTORIA ISLAND, LAGOS
Tel: +234 8110728119
E-mail: czjie@chintglobal.com

North America

United States

NOARK Electric (USA) Inc

Add: 2188 Pomona Blvd., Pomona, CA 91768
Tel: 626-330-7007
Fax: 626-330-8035
E-mail: nasales@noark-electric.com

Mexico

CHINT SOLAR MEXICO S DE RL DE CV

Add: Miguel Cervantes Saavedra 169 Piso 11 Col. Granada Del. Miguel Hidalgo
C.P. 11520 CDMX, México
Tel: +52 1-55-8881-6127
E-mail: marie.casillas@chint-mexico.com


**CHINT GLOBAL PTE. LTD.**

Building A3, 3655 SiXian Road,
Songjiang District, Shanghai, China

Tel: +86-21-5677 7777 Web: www.chintglobal.comE-mail: global-sales@chintglobal.com**A CHINT COMPANY**

CHNT

Empower the World

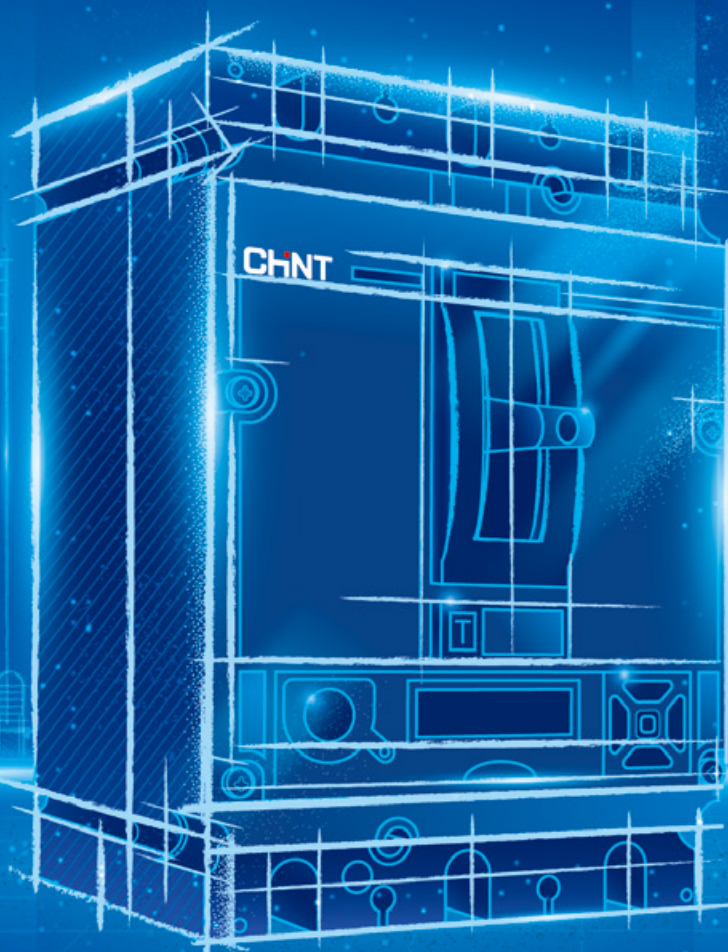

NM8N HIGH VOLTAGE SERIES

Moulded Case Circuit Breaker

Contents

1.General	01
2. Operating conditions	01
3.Type designation	02
4. Technical data	02
5.Release.....	03
6.Tripping Curve.....	05
7.Mounting of circuit breaker.....	10
8. Overall and Mounting Dimensions.....	12
9.Accessories characteristics and installation.....	16
10.Supplemented Technical Information.....	21



1.General

This NM8N High-voltage (HV) Series Molded Case Circuit Breaker is specially designed for handling high-voltage electrical system, capable to break heavy loaded electrical circuit systems under wide range of operating temperature of $-40^{\circ}\text{C} \sim +70^{\circ}\text{C}$. The characteristics of this Circuit Breaker is its capability to break circuit with zero arcing, which is an ideal component for meeting the requirements of many systems such as the solar (PV) power generation system. This Circuit Breaker works perfectly up to the maximum working voltage of AC 1150V, which can effectively protects electrical systems like the output loading of the string Inverters, and others such as the loading capacity of the AC combiner box in the photovoltaic systems.

2. Operating conditions

2.1 Temperature:

Operating and storage temperature is $-40^{\circ}\text{C} \sim +70^{\circ}\text{C}$; the average value within 24 hours does not exceed $+35^{\circ}\text{C}$; when the ambient temperature is $-40^{\circ}\text{C} \sim +70^{\circ}\text{C}$, users need to consider derating or temperature compensation whose details can be referred to in Page

2.2 Altitude: $\leq 2000\text{m}$;

2.3 Pollution grade: Grade 3;


2.4 IP grade: IP40

2.5 Air conditions:

At mounting site, relative humidity not exceed 50% at the max temperature of $+40^{\circ}\text{C}$, higher relative humidity is allowable under lower temperature. For example, RH could be 90% at $+20^{\circ}\text{C}$, special measures should be taken to occurrence of dews.

3.Type designation

Model fast selection guide

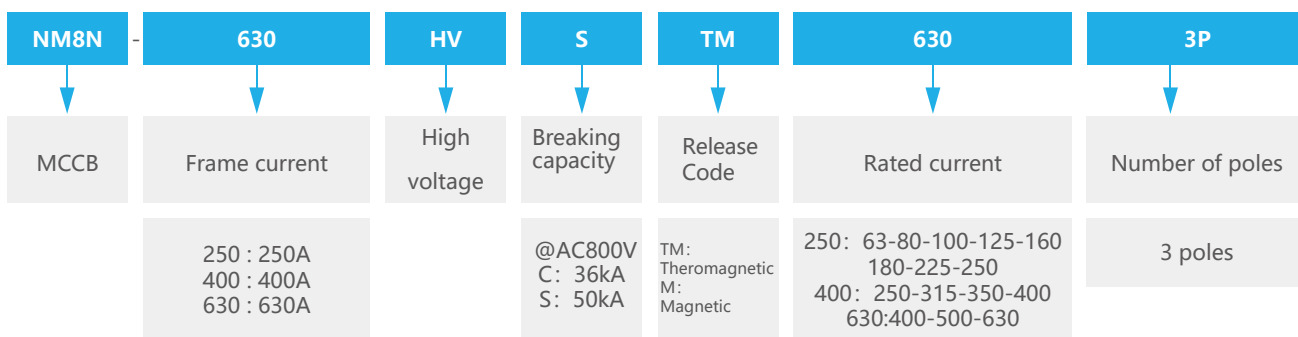


Note: example of model purchase

NM8N-630 HV S TM 630 3P

This means to order an NM8N high voltage (HV) series, with 630 frame, breaking capacity of 50kA, thermomagnetic power distribution protection type, rated working current 630A, 3 poles AC moulded case circuit breaker.

 4. Technical data


Model	NM8N-250HV		NM8N-400HV		NM8N-630HV		
Frame Current Inm(A)	250		400		630		
Rated Current In (A),40°C	63-80-100-125-160-180-200-225-250		250-315-350-400		400-500-630		
Insulation Voltage Ui (V)			1250				
Rated impulse withstand voltage Uimp (kV)	8		12		12		
Rated Voltage Ue (V)			690/800/1000/1150				
Number of Poles			3P				
Breaking Capacity	C	S	C	S	C	S	
Rated Ultimate Breaking Capacity Icu (kA)	AC690V	50	80	50	80	50	80
	AC800V	36	50	36	50	36	50
	AC1000V	15	30	25	35	25	35
	AC1150V	10	10	10	10	10	10
Rated Service Breaking Capacity Ics (kA)	AC690V	50	80	50	80	50	80
	AC800V	36	36	36	50	36	50
	AC1000V	15	15	15	20	15	20
	AC1150V	10	10	10	10	10	10
Release type	TM (Theromagnetic type) ,M (Magnetic type)						
Mechanical Durability	15000		15000		15000		
Electrical durability	1500		1500		1500		
Outline sizes 	Width	106		140		140	
	Height	200		250		250	
	Depth	120		135		135	



5. Release

5.1 Theromagnetic type Release (TM)

The setting value of Theromagnetic type Release (TM) of NM8N-250HV, 400HV and 630HV High-voltage (HV) Series Moulded Case Circuit Breakers can be adjusted to meet the protection requirements.

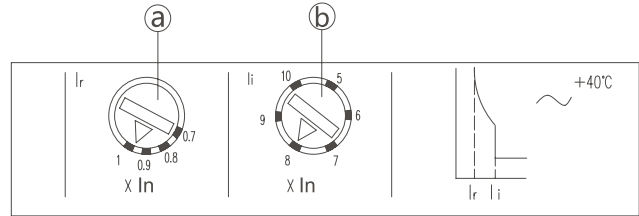

Theromagnetic Release Data Sheet

Theromagnetic type Release (TM)	250	400	630
Number of Poles	3P		
Current specification	63-80-100-125-160-180-200-225-250	250-315-350-400	400-500-630
Over-load Protection			
Current setting (A)	0.7-0.8-0.9-1.0		
$I_r = I_n \times$ Accuracy			
Short-circuit Instantaneous Protection			
Current setting (A)	10(63A ~ 100A) 7-8-9-10-11-12(125A ~ 160A)	5-6-7-8-9-10	
$I_i = I_n \times$	5-6-7-8-9-10(180A ~ 250A)		
Accuracy (%)	±20		

5.2 Magnetic type Release (M)

5.2.1 Motor Startup Characteristics

Most of power motors adopt three-phase asynchronous induction motors (AIM) design for various applications in the industry. Most AIMs use direct startup strategy known as the Full-Voltage starting, which starts the motor by feeding unlimited electric power directly into the motor. The asynchronous motor needs a very large startup current in the range of approximate 4 - 7 times of the rated current to kick start the motor, the high current is needed due mainly to the inertia of the motor when it is kick started from its idle state. Although the revolving speed of the rotor cannot reach its normal rated speed instantaneously during the kick-starting stage, the relatively high speed of the rotor windings cuts the magnetic field at a high speed, thus producing very large current in the motor system. This large current in the rotor induces a large magnetic field which in turn interacts with the stator winding, resulting in a rapidly increase of current loading in the system.

5.2.2 Startup Parameters

Rated Current (I_n): The rating of the electric current of the motor under normal operation.

Startup Current (I_d): The start up current of the motor which is rated at an average of $7.2 \times I_n$, dependent on the operation conditions.

Startup Peak Current (I_d'): The transient current during the first two half cycling waves after the motor is powered up is generally in the order of $14 \times I_n$.

Startup Time (t_d): The startup time for starting the motor from idle to fully operation stage is generally approximate 0.5s - 20s.

5.2.3 The Important Roles of the Protection Device in the Direct Startup System

When the conventional tripping current of the magnetic Release is not set properly in the electric rotor system, the Circuit Breaker may operate mistakenly by considering the large startup current of the motor as the system is in the short-circuit state. Similarly, the heat that has been generated by the large startup current during the kick start state of the motor, will cause the thermal relay to trip off the system mistakenly. In the case of a contactor system it is necessary to ensure the current can be disconnected from the motor during the startup stage, especially when the motor needs an electric or regenerative braking capability. This can be achieved by reducing the capacity of the system generally. Hence to avoid the misoperation of protection device within the motor system that caused by the influence of the start up current, the following conditions are advised to follow:

- To ensure the entire inverse time characteristic curve of the independent thermal relay well above the start up current.
- To ensure the short-circuit current trip setting of the Circuit Breaker that with magnetic protection capacity, should be greater than the peak startup current of the motor.


5.2.4 Protection Scheme

This NM8N-HV Series Product has been designed for providing solutions for the starting up, to control and to protect all different variants of three-phase asynchronous motor systems.

Three elements protection adopts: electromagnetic Protection Circuit Breaker + Contactor + Thermal Relay

Electromagnetic Protection Circuit Breaker can be used for short-circuit protection, the Contactor can be used for motor operation, and the Thermal Relay can be used for system overload, phase loss and phase imbalance protections.

The current range of Electromagnetic Protection Circuit Breaker is 63-630A, the adjustable range is 9~14In, and the accuracy is 20%. It is especially suitable for application in the classical three elements protection scheme.

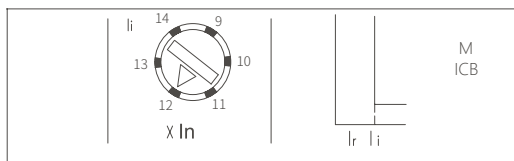

Magnetic Release Data Sheet


Magnetic type Release (M)	250	400	630
Number of Poles	3P		
Short-circuit Instantaneous Protection			
Current setting (A)	12(63A ~ 100A)	9-10-11-12-13-14	
li=InX	9-10-11-12-13-14(125A ~ 250A)	9-10-11-12-13-14	
Accuracy (%)	±20		




6.Tripping Curve

6.1 Tripping Characteristic Curve of Power distribution Protection


NM8N-250HV(63A, 80A, 100A)

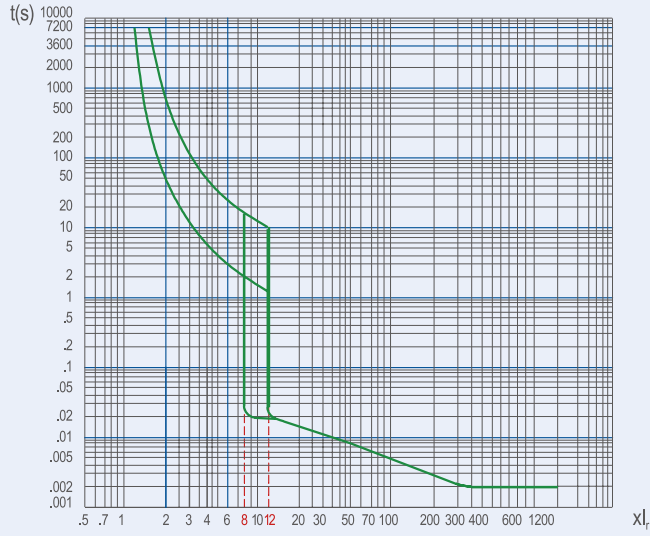


NM8N-250HV(125A, 160A)

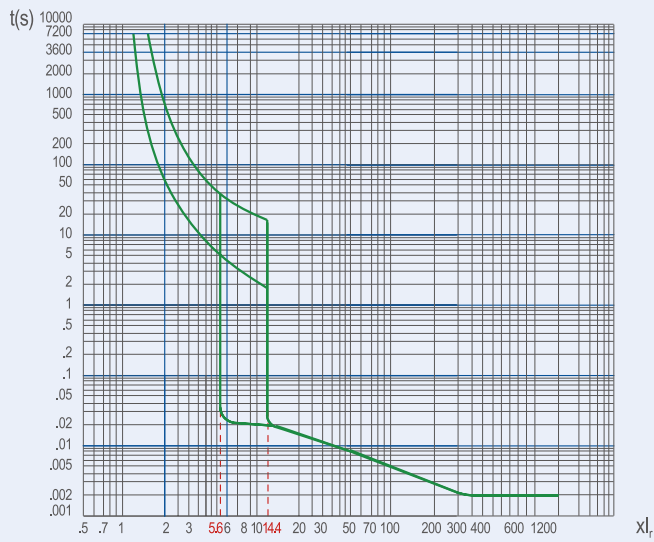


NM8N-250HV(180A, 200A, 225A, 250A)

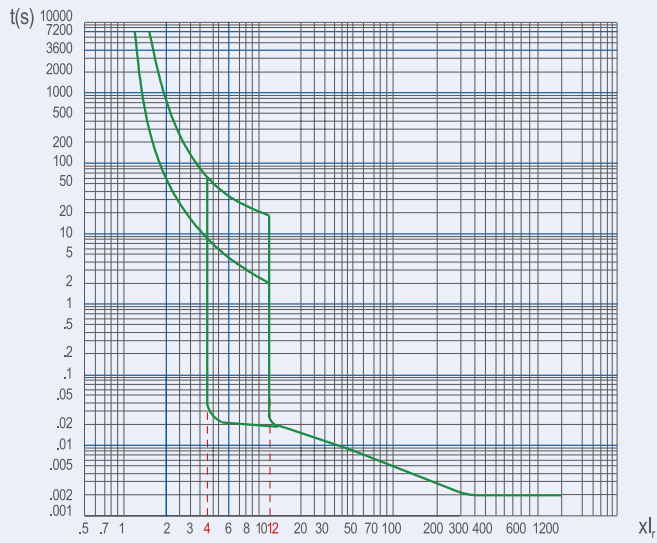

NM8N-400HV(250A, 315A, 350A, 400A)

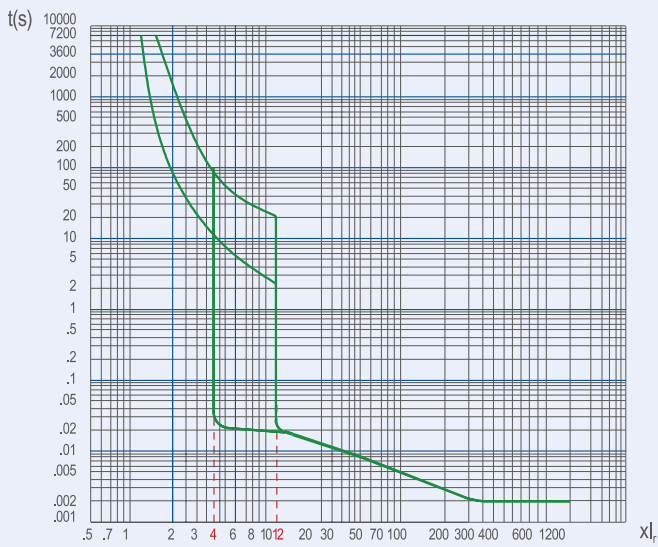


NM8N-630HV((400A,500A and 630A))

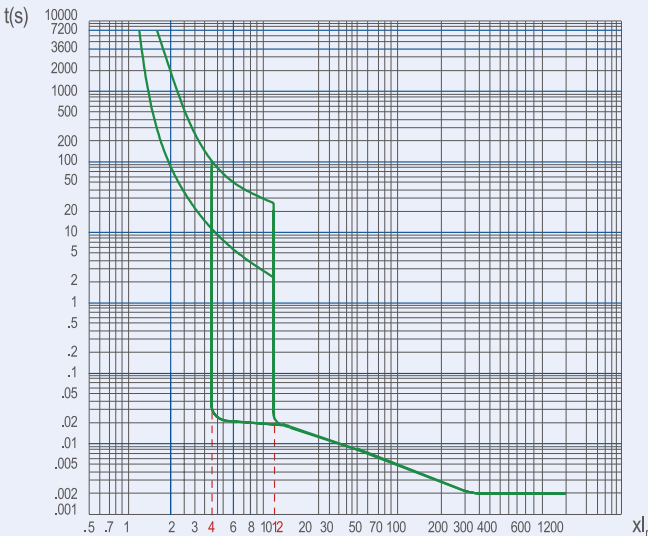


6.2 Tripping Characteristic Curve of Motor Protection

NM8N-250HV(63A,80A and 100A)

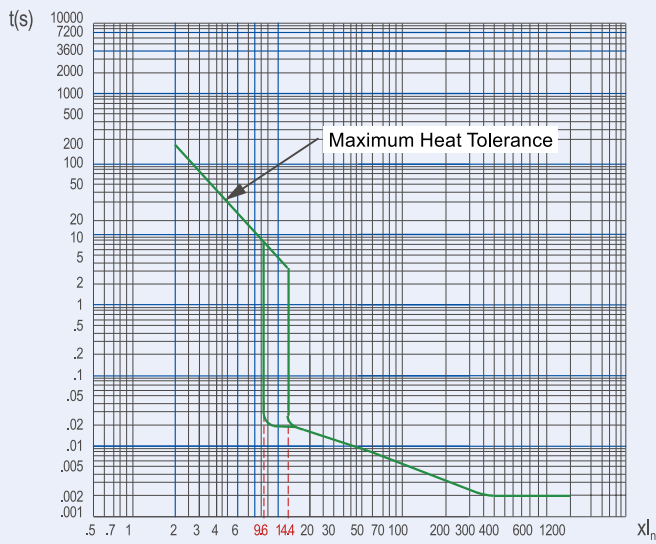


NM8N-250HV(125A,160A,180A,200A,225A and 250A)

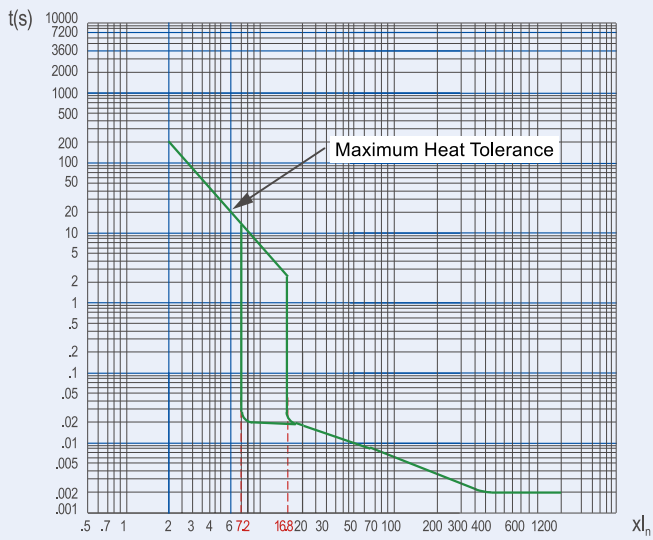




NM8N-400HV(250A,315A,350A and 400A)

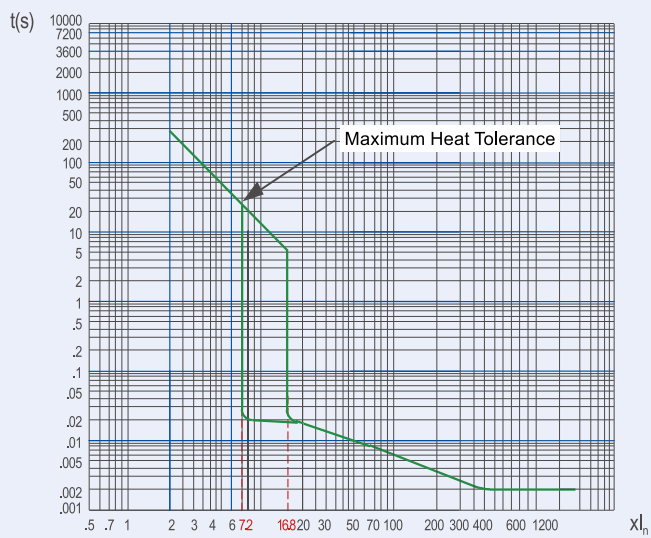


NM8N-630HV(400A,500A and 630A)


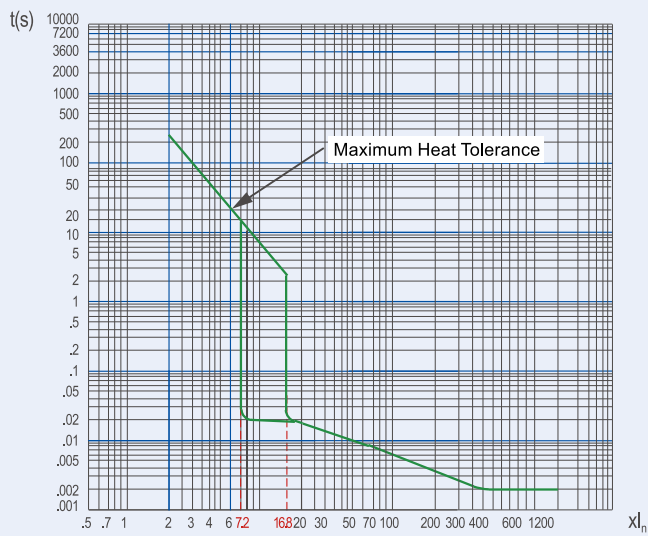


7. Mounting of circuit breaker


7.1 Modes of down-lead

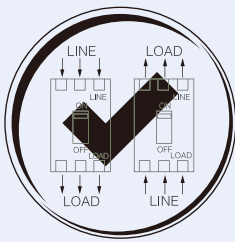






Incoming Methods

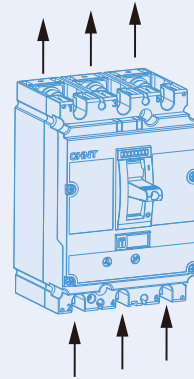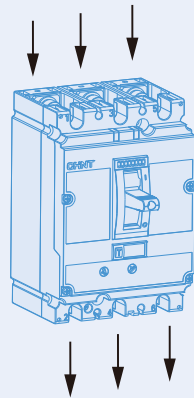


7.2 Modes of mounting

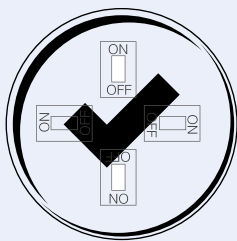


Installation Methods

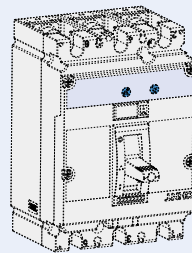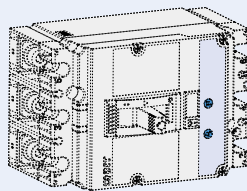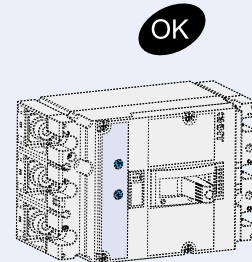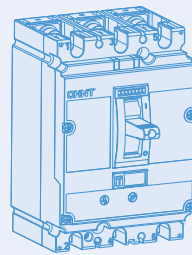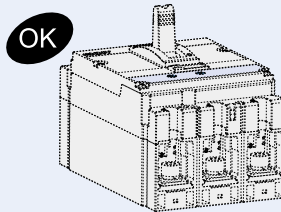


7.3 Safe distance

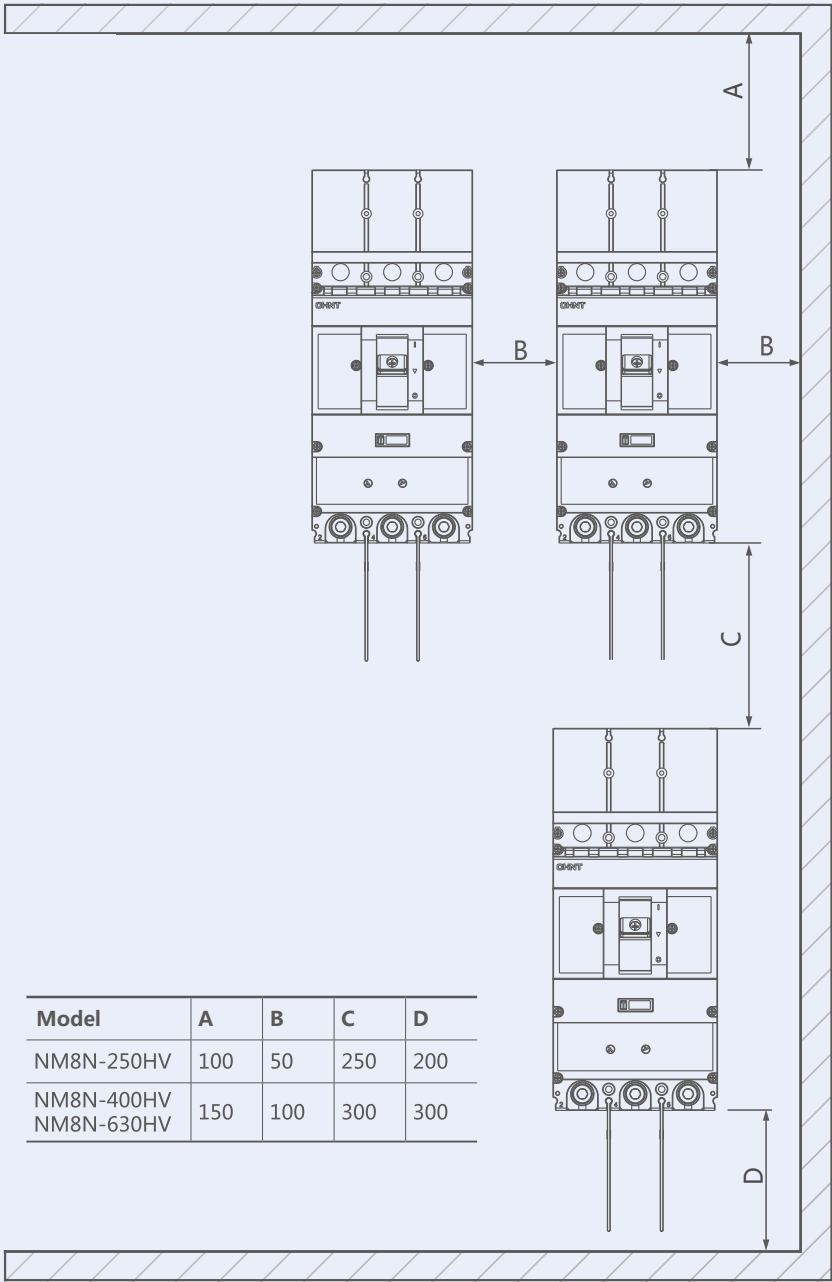


 Minimum Mounting distance must be ensured.

8. Overall and Mounting Dimensions

8.1 NM8N-250HV

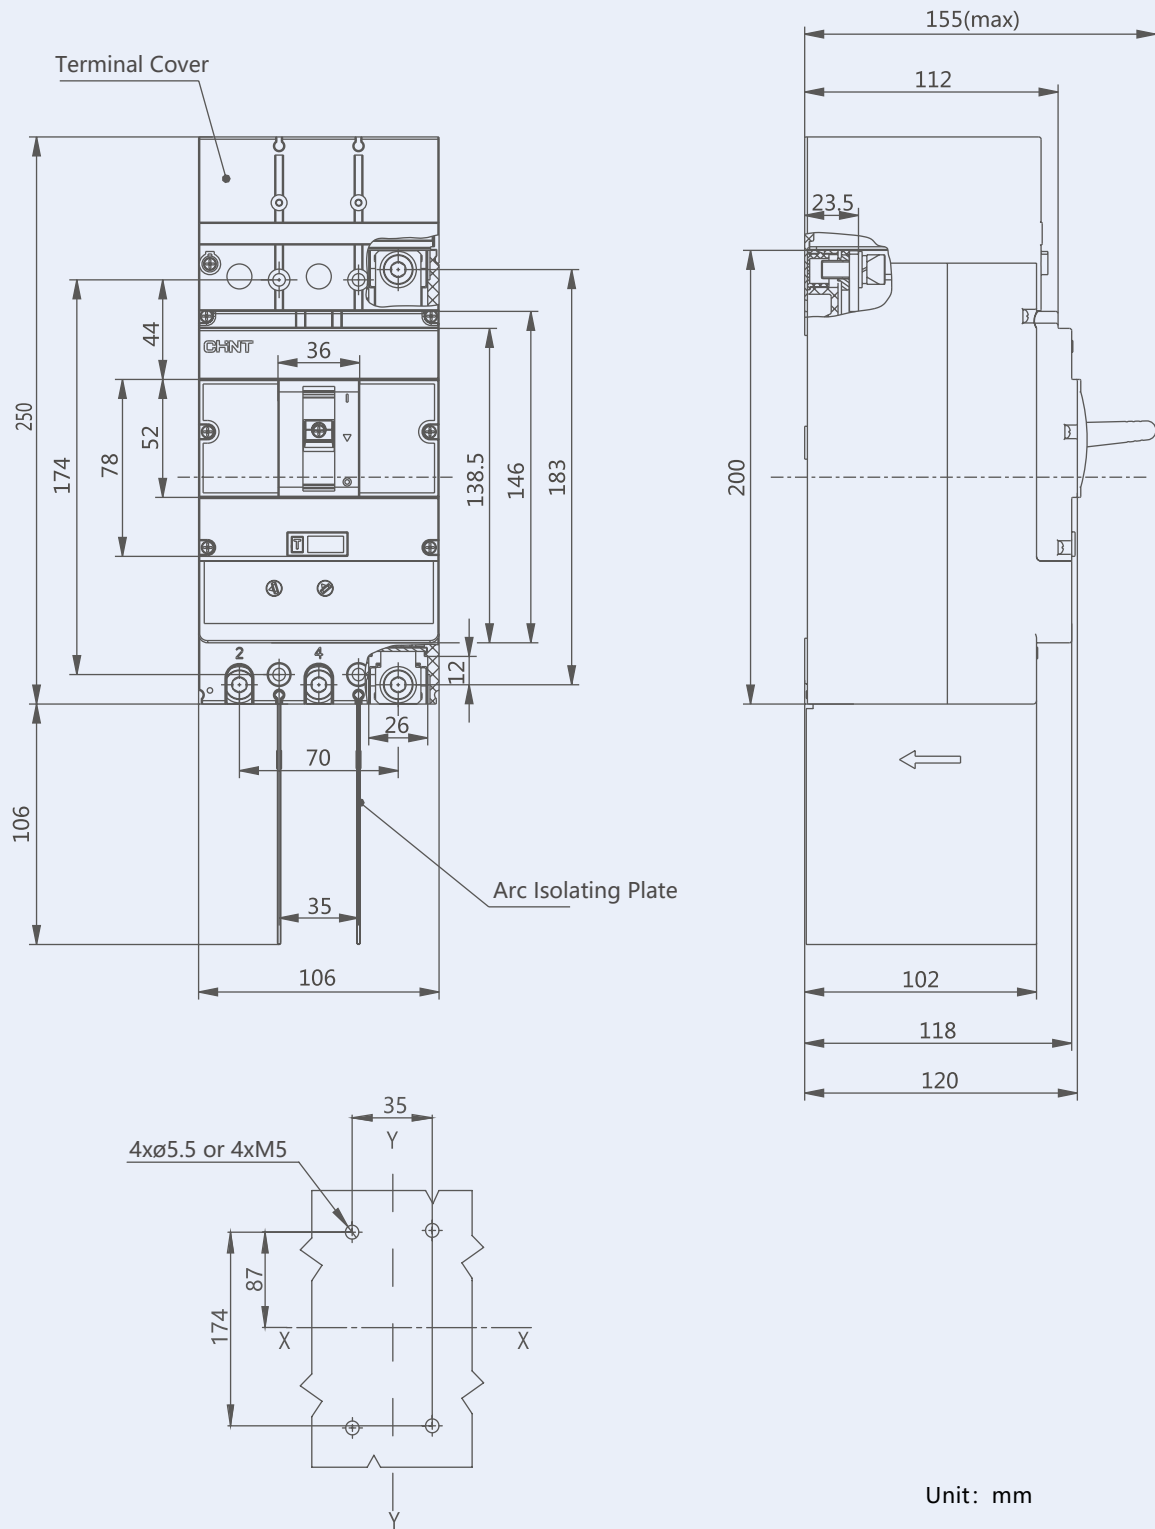


8.2 NM8N-400/630HV

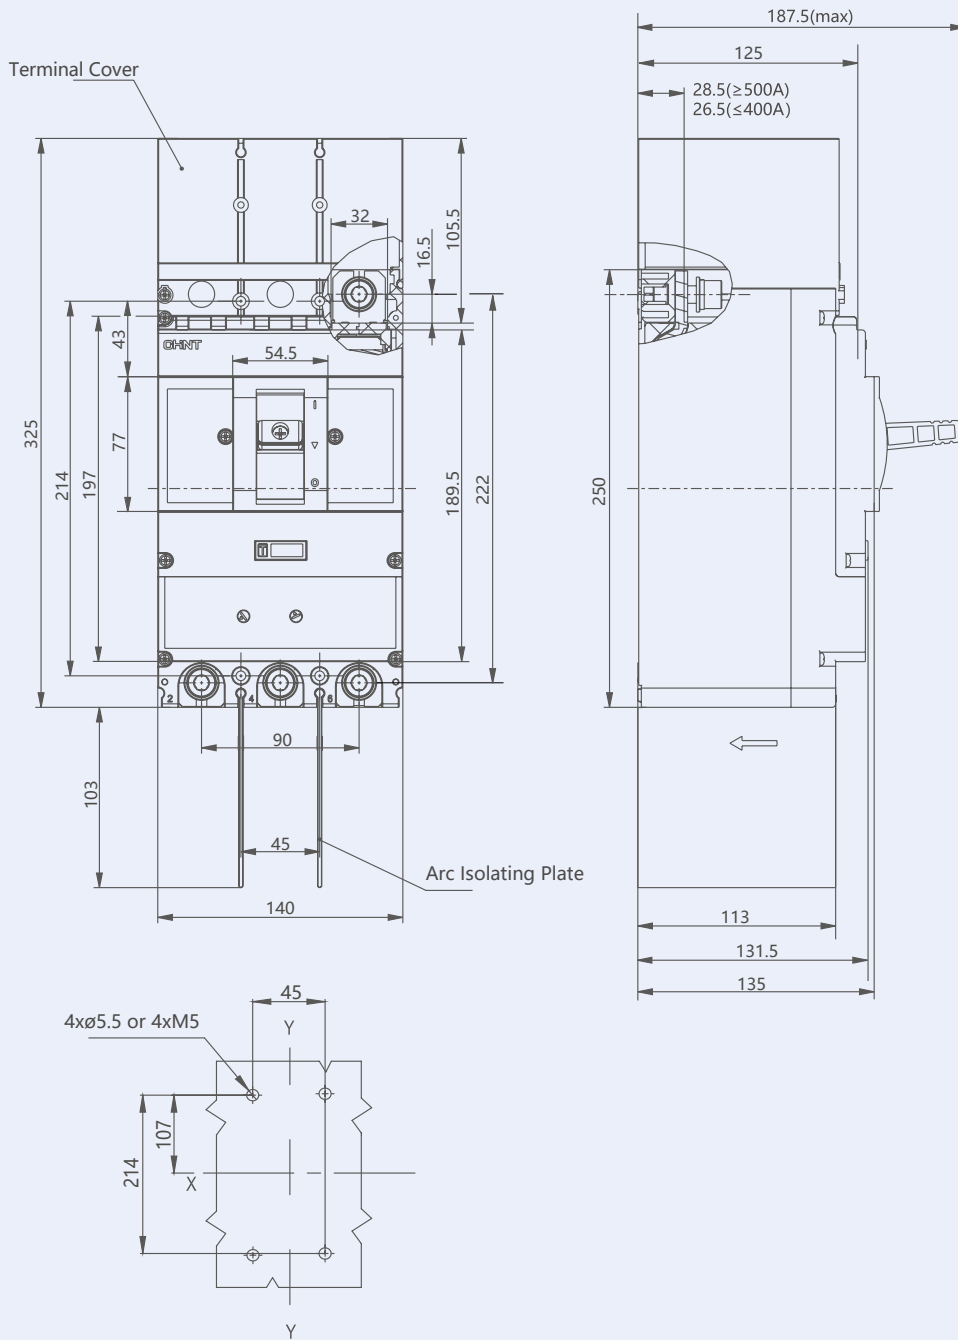


Unit: mm

8.3 Panel front hole opening

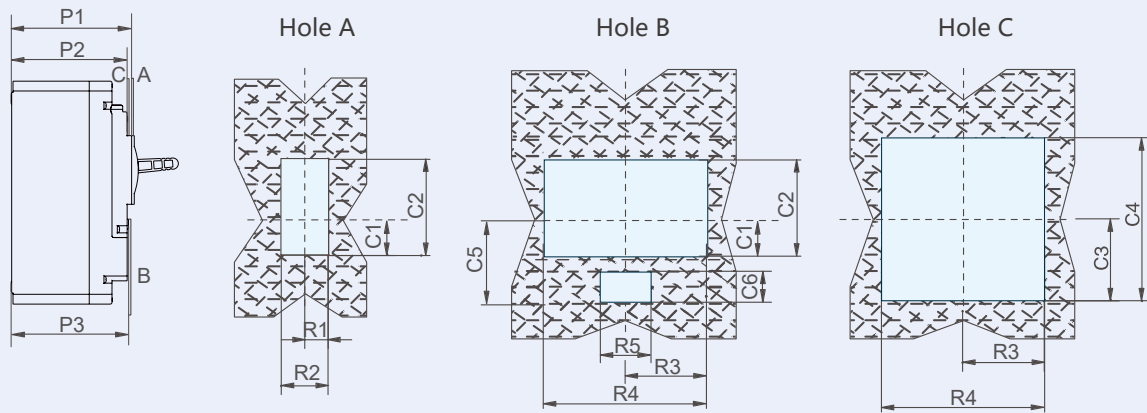


Size type	Size code	Product Model	
		NM8N-250HV	NM8N-400HV/630HV
opening size	P1	121	136
	P2	112.5	126
	P3	118.5	132
	R1	18.5	28
	R2	37	56
	R3	53.5	70.5
	R4	107	141
	R5	29	/
	C1	9.5	13.5
	C2	53	78
	C3	73.5	99
	C4	139.5	190
	C5	35.5	/
	C6	12	/

8.4 Front connection plate

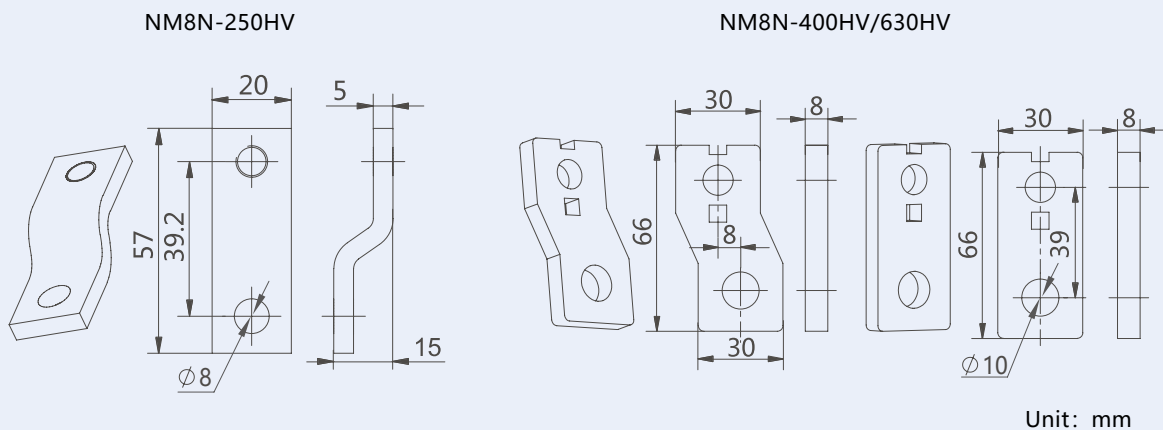

8.5 Wiring

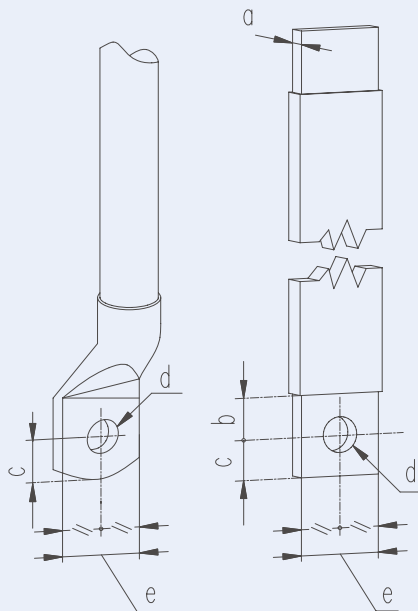

Unit: mm

Size	a	b	c	d	e
NM8N-250HV	6	≥ 9.5	≤ 12	Φ8.5	≤ 25
NM8N-400HV NM8N-630HV	8	≥ 15	≤ 12.5	Φ10.5	≤ 30

9. Accessories characteristics and installation

9.1 AX Auxiliary contact

9.1.1 Function

Remotely indicate the circuit breaker's making (on) or breaking / tripping (OFF) status, connected to the auxiliary circuit of the circuit breaker.



9.1.2 Model description

AX 21-M8

Serial code :NM8N series

Frame size code : Auxiliary contacts are universal accessori for each frame,with default as code 21

Auxiliary contact name code


9.1.3 Circuit Breaker status indication

Breaker is at breaking / free trip status	
Breaker is at making status	

9.1.4 Electrical characteristics

Rated voltage (V)	Rated current (A)	
	AC-15	DC-13
AC 110	5	—
AC 240	4	—
AC 415	2	—
DC 110	—	0.25
DC 220	—	0.25

9.1.5 Wiring diagram

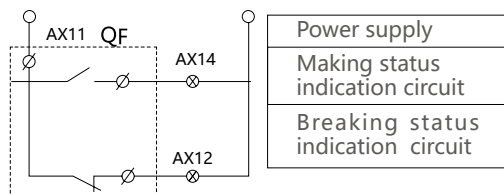



9.2 AL Alarm contact

9.2.1 Function




It is mainly used to provide a signal when the load of the circuit breaker is overloaded, short-circuited or undervoltage, or tripped.

The reasons for the failure of the alarm signal are:

- Over-load or short-circuit
- Undervoltage trip
- Manual free trip

9.2.2 Model description

AL 21-M8

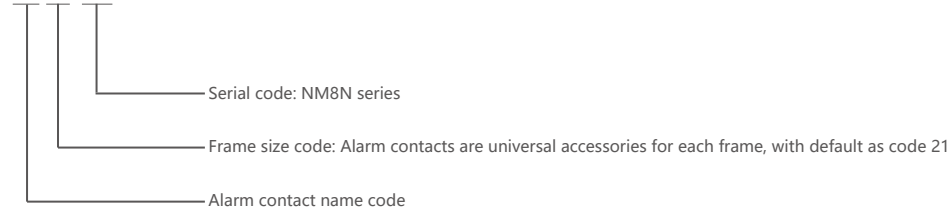


9.2.3 Circuit Breaker status indication

Breaker is at breaking / Making status	
Breaker is at free trip status	

9.2.4 Electrical characteristics

Rated voltage (V)	Rated current (A)	
	AC-15	DC-13
AC 110	5	—
AC 240	4	—
AC 415	2	—
DC 110	—	0.25
DC 220	—	0.25

9.2.5 Wiring diagram

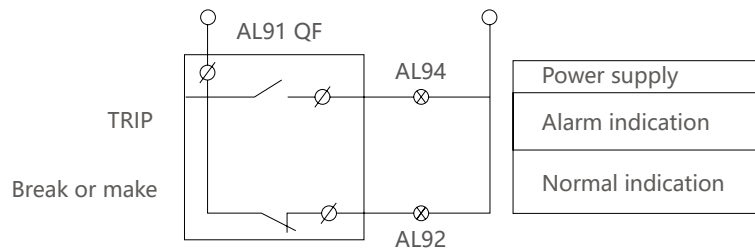

9.3 SHT Shunt release


9.3.1 Function



Shunt releases operate according to electrical signals, enabling remote control and automatic control of circuit breakers. When the supply voltage When the voltage is equal to any voltage between 70% and 110% of the rated control power supply voltage, the shunt release should enable the circuit breaker to operate reliably.

9.3.2 Model description

SHT 22-M8 AC48V

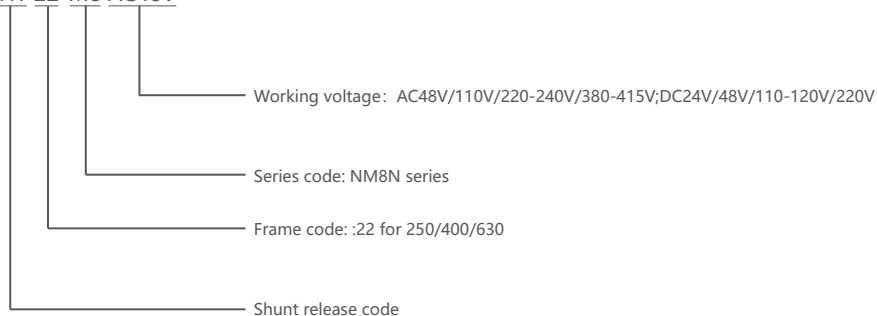

Note: Shunt release of 400/630A frame and 250A frame is compatible.


9.3.3 Electrical characteristics

Frame	Power loss (W)							
	AC48V	AC110V	AC220-240V	AC380-415V	DC24V	DC48V	DC110-120V	DC220V
250/400/630A	2.3	2.5	2.2	2.5	2.2	2.5	2.5	2.5

9.3.4 Trip characteristics

Can be powered for a long time. Response time: pulse type > 20ms, <60ms

9.3.5 Wiring diagram

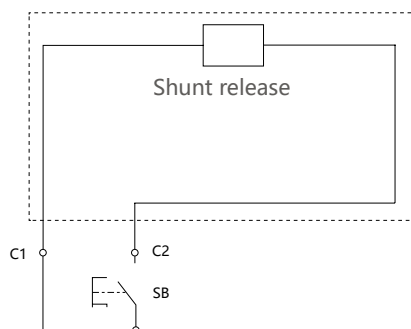

Note: When the rated control power supply voltage DC24V shunt release is used, the maximum length of the copper wire (each of the two wires) must meet the following table:

Conductor cross-sectional area rated control voltageUs(DC24V)	1.5mm ²	2.5mm ²
	100%Us	150m
85%Us	100m	160m



9.4 UVT Under-voltage release

9.4.1 Function




Realize the under-voltage protection function of the circuit breaker, open the circuit breaker when the power supply voltage is too low, and protect the electrical equipment.

- When the supply voltage drops (even slowly) to 70% to 35% of the rated control supply voltage, the undervoltage trips The breaker should open the circuit breaker reliably.
- When the supply voltage is equal to or greater than 85% of the rated control supply voltage of the undervoltage release, the circuit breaker should be guaranteed to close.
- When the supply voltage is less than 35% of the rated control supply voltage of the undervoltage release, the undervoltage release should prevent the circuit breaker.

9.4.2 Model description

UVT 22-M8 AC48V

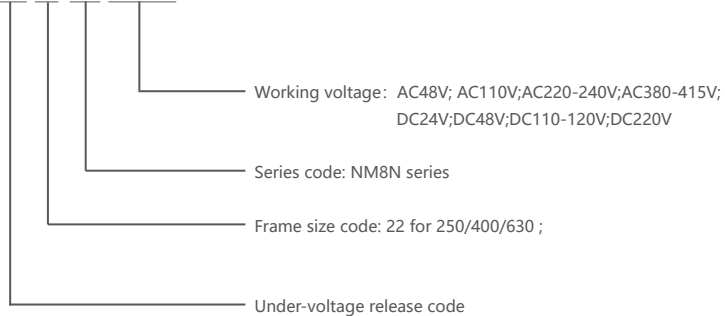


Note: Shunt release of 400/630A frame and 250A frame is compatible.

9.4.3 Electrical characteristics

Frame	Power loss (W)							
	AC48V	AC110V	AC220-240V	AC380-415V	DC24V	DC48V	DC110-120V	DC220V
250/400/630A	1.5	1.5	2.2	3	0.8	1.5	2	2.5

9.4.4 Wiring diagram

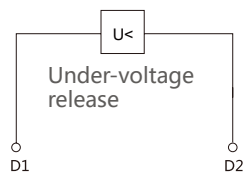

9.5 FCP front connection plate


9.5.1 Function

Make the circuit breaker have a flexible wiring mode. By installing this accessory, the pole spacing can be increased to increase the electrical gap between adjacent poles at the inlet and outlet ends of the circuit breaker and enhance the safety between lines.



9.5.2 Model description


FCP 22-M8 3P

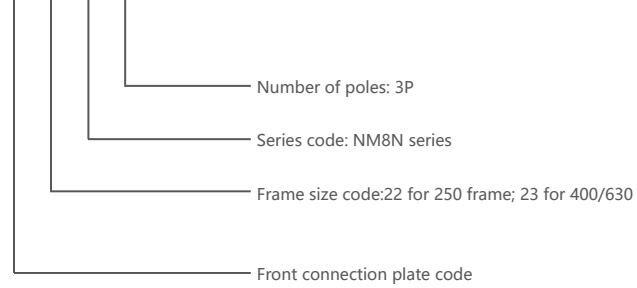

9.5.3 Internal accessories installation diagram

NM8N-250HV

NM8N-400/630HV

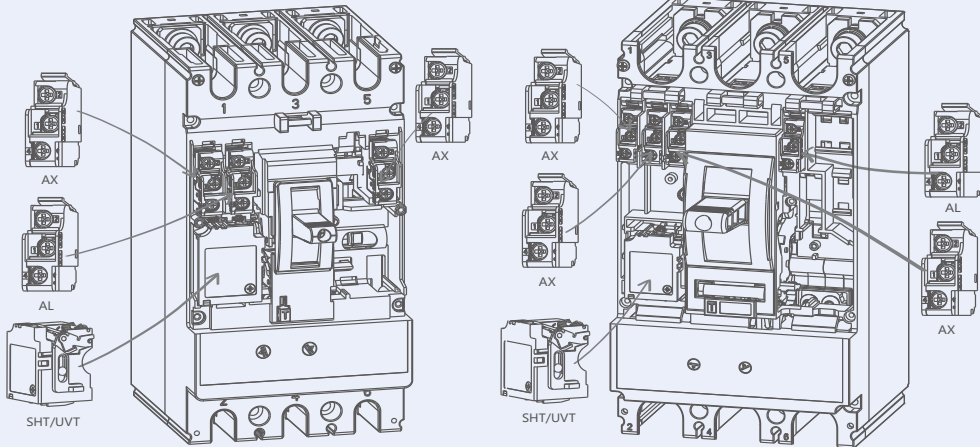

AX	Auxiliary Contact
AL	Alarm Contact
SHT	Shunt Release
UVT	Under-voltage Release

AX	ON	AX12 ——— AX11
	OFF	AX12 ——— AX11
AL	OFF & ON	AL92 ——— AL91
	TRIP	AL92 ——— AL91



10. Supplemented Technical Information

10.1 Power loss

Altitude derating coefficient table	Product model Rated current (A)	Fixed breaker internal resistance per pole (mΩ)	Power loss per pole (W)
NM8N-250HV	63	1.7	6.7
	80	1.3	8.3
	100	0.88	8.8
	125	0.7	10.9
	160	0.55	14.1
	180	0.55	17.8
	200	0.55	22.0
	225	0.4	20.3
NM8N-400HV/630HV	250	0.4	25.0
	250	0.35	21.9
	315	0.25	24.8
	350	0.25	30.6
	400	0.20	32.0
	500	0.12	30.0
	630	0.12	47.6

10.2 Temperature compensation coefficient table

Air temperature		-40°C	-35°C	-25°C	-15°C	-5°C	-0°C	10°C	20°C	30°C	40°C	50°C	60°C	70°C
NM8N-250HV	Rated current (A)													
	63	88	86.5	83	80	77	75	72	69	66	63	58.5	53	46
	80	112	110	106	102	98	96	92	88	84	80	74.5	67	56
	100	140	137	132	127	122	120	115	110	105	100	93	84	80
	125	175	172	165	159	153	150	144	137	131	125	118	106	96
	160	224	220	212	204	196	192	184	176	168	160	152	136	120
	180	252	247	238	229	220	216	207	198	189	180	171	157	144
	200	280	275	265	255	245	240	230	220	210	200	190	175	166
	225	315	309	300	288	276	270	259	247	236	225	213	196	180
NM8N-400HV/630HV	250	350	343	332	319	306	300	287	275	262	250	237	218	207
	250	350	343	332	319	306	300	287	275	262	250	237	225	212
	315	441	433	418	402	386	378	362	346	331	315	300	286	271
	350	490	481	465	447	429	420	402	385	367	350	332	295	276
	400	560	550	530	510	490	480	460	440	420	400	380	360	320
	500	700	687	662	637	612	600	575	550	525	500	450	406	360
630	882	865	834	802	770	756	725	693	661	630	567	511	454	

10.3 Altitude derating coefficient table

Altitude (m)		2000m	3000m	4000m	5000m
Rated current (A)		1×In	0.96×In	0.93×In	0.9×In
Rated voltage Ue (V)		1150	1030	950	850
Rated Insulation voltage Ui (V)		1250	1120	1000	880
Dielectric properties (V)		2550	2300	2050	1800
Rated impulse withstand voltage	NM8N-250HV	8	8	8	8
	NM8N-400HV	12	10	8	8
	NM8N-630HV				

Asia Pacific

China | Global HQ

Zhejiang CHINT Electrics Co., Ltd.

Address: A3 Building, No. 3655 Sixian Road, Songjiang Shanghai 201614.
Tel: +86 21 5677 7777
Fax: +86 21 5677 7777
Email: global-sales@chintglobal.com
Website: www.chintglobal.com

Singapore | Asia Pacific HQ

CHINT Global Pte Ltd

Address: 8 Kallang Avenue, #04-06/09 Aperia Office Tower 1, Singapore 339509.
Tel: +65 6329 3110
Fax: +65 6329 3159
Website: www.chintglobal.com

Sunlight Electrical Pte Ltd

Address: 1 Third Chin Bee Road, Singapore 618679.
Tel: +65 6741 9055
Fax: +65 6265 4586
Email: sales@sunlightgroup.com
Website: www.sunlightgroup.com

India

CHINT India Energy Solution Private Limited

Address: Discovery Tower, Plot No. A-17, Ground Floor Industrial Area Sector 62
Noida, India 201309.
Tel: +91 1202 9750 57
Email: marketing@chint.co.in
Website: www.chint.co.in

Philippines

CHINT Electric Co., Ltd

Address: Unit 201, Taipan Place, F. Ortigas Jr. Road, Ortigas Center, Pasig City,
Metro Manila, Philippines.
Tel: +63 967 273 0174 / +63 977 017 6320
Email: liq07@chintglobal.com / wencell@chintglobal.com
Website: www.chintglobal.com

Indonesia

PT. CHINT Indonesia

Address: Kompleks Prima Center I, Blok C9-10, Jl. Pesing Poglar Jl. Pool PPD No. 11,
RT.9/RW.2, Cengkareng, Jakarta Barat.
Tel: +62 21 5436 3000
Email: sales@chint-indonesia.com
Website: www.chintIndonesia.com

Vietnam

CHINT Vietnam Holding Co., Ltd

Address: So 2Bis-4-6, Le Thanh Ton, P. Ben Nghe Quan 1, Ho Chi Minh, Vietnam.
Tel: +84 0283 8270 015
Email: marketing.vn@chintglobal.com
Website: www.chintglobal.vn

Sunlight Electrical (VN) Co., Ltd

Address: 20 Doc Lap Ave, VSIP, Thuan An City, Binh Duong Province, Vietnam.
Tel: +84 0274 3743 505
Email: sales.sev@sunlightgroup-vn.com.vn
Website: www.sunlightvietnam.com.vn

Cambodia

CHINT (Cambodia) Power Equipment Co., Ltd

Address: No.15, St. 542, Sangkat Boeung Kok 1, Khan Toul Kork, Phnom Penh,
Cambodia.
Tel: +855 23 231 077
Email: lbin3@chintglobal.com
Website: www.chintglobal.com

SchneiTec CHINT Co., Ltd

Address: Ansor Kdam Village, Sna Ansa Commune, Krakor District, Pursat Province,
Cambodia
Tel: +855 09 5353 268
Email: liubin@schneitec-chint.com.kh / info@schneitec-chint.com.kh
Website: www.schneitec-chint.com.kh

Latin America

Brazil

CHINT Elétricos América do Sul Ltda.

Add: Av. Paulista, 1765 - Edifício Scarpa - Conjunto 22 , Bela Vista - CEP
01311-200 - São Paulo - SP
Tel. : +55 (11) 3266-7786
E-mail: chintbr@chint.com

Peru

CHINT LATAM (PERU) S.A.C.

Add: Av. Camino Real No.348, Torre El Pilar, Oficina 603, San Isidro, Lima 27,
Peru
Tel: +51 1 763 4917
Email: chintlataperu@chint.com

Ecuador

CHINT ELECTRICS (HONG KONG) LIMITED (Ecuador Branch)

Add.: Calle: REP.DEL SALVADOR Número: 10-84 Intersección: AV NACIONES
UNIDAS
Edificio: CENTRO COMERCIAL MANSION BLANCA
E-mail: lufz@chintglobal.com