

9.2 AL Alarm contact

9.2.1 Function

It is mainly used to provide a signal when the load of the circuit breaker is overloaded, short-circuited or undervoltage, or tripped.


The reasons for the failure of the alarm signal are:

- Over-load or short-circuit
- Undervoltage trip
- Residual current action trip
- Manual free trip



9.2.2 Model description

AL 21-M8

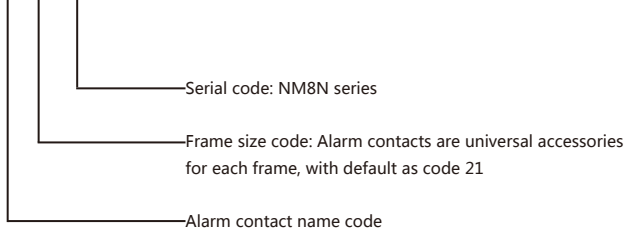

9.2.3 Indication of circuit breaker status

Circuit breaker is at breaking or making status	B12		B11
Circuit breaker is at free tripping status	B12		B11

9.2.4 Electrical characteristics

	AC-15	DC-13
AC 110	5	—
AC 240	4	—
AC 415	2	—
DC 110	—	0.25
DC 220	—	0.25

9.2.5 Wiring diagram

